Product Data Sheet February 2015 IP210, Rev EA

# **Mobrey Mini-SQUING**

**Compact Vibrating Fork Liquid Level Switch** 



- Function virtually unaffected by flow, turbulence, bubbles, foam, vibration, solids content, coating, properties of the liquid, and product variations
- No need for calibration and requires minimum installation procedures
- Polarity insensitive and short circuit protection
- Industry standard plug/socket connection
- No moving parts or crevices means virtually no maintenance

- Electronic, self-checking, and condition monitoring - Heartbeat LED gives status and health information
- Magnetic test point makes functional test easy
- Compact design, small in size and weight
- "Fast Drip" Fork Design gives quicker response time especially with viscous liquids
- Hygienic connections





## **Overview of the Mobrey Mini-SQUING**



Threaded process connection

Tri-Clamp process connection



Compact and lightweight



'Fast Drip' forks

### **Measurement principle**

The Mobrey Mini-SQUING is designed using the principle of a tuning fork. A piezo-electric crystal oscillates the forks at their natural frequency. Changes to this frequency are continuously monitored. The frequency of the vibrating fork sensor changes depending on the medium in which it is immersed. The denser the liquid, the lower the frequency.

When used as a low level alarm, the liquid in the tank or pipe drains down past the fork, causing a change of natural frequency that is detected by the electronics and switches the output state.

When the Mini-SQUING is used as a high level alarm, the liquid rises in the tank or pipe, making contact with the fork which then causes the output state to switch.

### Key features and benefits

- Virtually unaffected by turbulence, foam, vibration, solids content, coating, or liquid properties
- Stainless steel housing and plug/socket connection for the fast fit, high volume user
- Compact and lightweight design for side or top mounting
- The industry standard DIN 43650 plug/socket is used for a fast connection. The polarity insensitivity and short circuit protection make electrical hook-up safe and easy
- The Mini-SQUING is designed for operation in temperatures from -40 to 302 °F (-40 to 150 °C)
- The 'heartbeat' LED gives status and health information on the Mini-SQUING
- 'Fast Drip' fork design gives quicker response time, especially with viscous liquids
- Rapid wet-to-dry time for highly responsive switching
- Fork shape is optimized for hand polishing to meet hygienic requirements
- No moving parts or crevices for virtually no maintenance

### Contents

Overview of the Mobrey Mini-SQUING	page 2
Mobrey Mini-SQUING Ordering Information	page 4
Specifications	page 5

Product Certifications	page 6
Dimensional Drawing	page 7

### Fit and forget

- Once installed, the Mini-SQUING is ready to go.
  It needs no calibration and requires minimum installation
- The 'heartbeat' LED is visible through the end cap and gives an instant visual indication that the unit is operational
- Functional testing of the instrument and system is easy with a magnetic test point
- You can install, and forget it

### Superior performance

- Functionality is virtually unaffected by flow, turbulence, bubbles, foam, or vibration
- The 'Fast Drip' design allows the liquid to be quickly drawn away from the fork tip, making the Mini-SQUING quicker and more responsive in high density or viscous liquid applications

### **Applications**

- Overfill protection
- High and low level alarms
- Leak detection
- Run dry or pump protection
- Pump control or limit detection
- Hygienic applications





High and low level alarm



Leak detection



# Mobrey Mini-SQUING Ordering Information

### Table 1. Mobrey Mini-SQUING ordering information

Model	Product Description			
VT	Compact Vibrating Fork Liquid Level Switch			
Electronic Ty	Electronic Type			
Standard				
0	Direct load switching with plug connection (2 wire) 21 to 264 Vac 50/60Hz, 21 to 264 Vdc			
1	PNP/PLC low voltage switching with plug connection 18 to 60 Vdc			
Process Connection Size / Type				
Standard				
0	<sup>3</sup> /4-in. BSPT (R) thread			
3	1-in. BSPT (R) thread			
5	<sup>3</sup> /4-in. NPT thread			
7	2-in. (51 mm) Tri-clamp			
F	1-in. BSPP (G) thread			
L	1-in. BSPP (G) Semi-extended 4.6 in. (116 mm)			
Typical Model Number: VT 0 7				

### Table 2. Spare parts and accessories ordering information

Spares and Accessories			
Standard			
SK331	Seal for 1-in. BSPP (G1A). Material: Non-asbestos BS7531 grade X carbon fiber with rubber binder		
SK267	Hygienic adaptor boss for 1-in. BSPP model. Material: 316 SST fitting. Fluorocarbon (FPM/FKM) O-ring		
SK266	Hygienic mounting kit for 2-in. (51 mm) Tri-clamp model. Includes vessel fitting, clamp ring, and seal. Material: 316 SST and NBR Nitrile		
MSP-MMS	Telescopic test magnet		

# **Specifications**

### **Material selection**

Emerson provides a variety of Mobrey products with various product options and configurations including materials of construction that can be expected to perform well in a wide range of applications. The Mobrey product information presented is intended as a guide for the purchaser to make an appropriate selection for the application. It is the purchaser's sole responsibility to make a careful analysis of all process parameters (such as all chemical components, temperature, pressure, flow rate, abrasives, contaminants, etc.), when specifying product, materials, options and components for the particular application. Emerson Process Management is not in a position to evaluate or guarantee the compatibility of the process fluid or other process parameters with the product, options, configuration or materials of construction selected.

### Physical

### Product

Mobrey Mini-SQUING Compact Liquid Level Switch

### **Measuring principle**

Vibrating Fork

### Applications

 Most liquids including coating liquids, aerated liquids, and slurries

### Mechanical

### **Process material**

- 316L Stainless Steel (1.4404)
- For Tri-Clamp connection, hand polished to better than 0.8 μm. Gasket material for 1 in. BSPP (G1) is Non-asbestos
  BS7531 Grade X carbon fiber with rubber binder.

### **Housing materials**

- Body: 304 SST with polyester label
- LED window: Flame retardant Polyamide (Pa12) UL94 V2
- Plug: Polyamide glass reinforced
- Plug seals: Nitrile butadiene rubber

### Mounting

- <sup>3</sup>/4-in. BSPT (R) or NPT
- 1-in. BSPT (R) or BSPP (G) thread, or
- Hygienic 2-in. (51 mm) Tri-clamp fitting

### **Dimensional drawings**

See "Dimensional Drawing" on page 7

### **Ingress Protection (IP) rating**

IP66/67 to EN60529

### Performance

### Hysteresis (water)

■ ±0.039-in. (± 1 mm) nominal.

### Switching point (water)


- 0.5 in. (13 mm) from fork tip if mounted vertically.
- 0.5 in. (13 mm) from the fork edge if mounted horizontally.
- The switch point varies with different liquid densities.

### Functional

### **Operating pressures**

- The final rating depends on the process connection
- Threaded Connection: See Figure 1
- Hygienic Connection: Up to 435 psig (30 barg)


### Figure 1. Process pressures graph

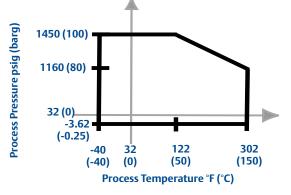

### **Operating** temperatures

See Figure 2 for the maximum and minimum temperatures

#### Figure 2. Process temperatures graph

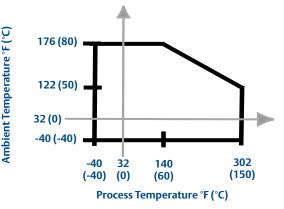

### Liquid density

Minimum 37.5 lb/ft<sup>3</sup> (600 kg/m<sup>3</sup>)

#### Liquid viscosity range

• 0.2 to 10000 cP (centiPoise)

#### Solids content and coating

- Maximum recommended diameter of solid particles in the liquid is 0.2 in. (5 mm)
- For coating products, avoid 'bridging' of forks

### Switching delay

1 second dry-to-wet or wet-to-dry

### CIP (Clean In Place) cleaning

• Withstands steam cleaning routines up to 302 °F (150 °C)

### **Electrical**

### Switching mode

■ User selectable (Dry=on or Wet=on) by selecting plug wiring

### **Cable connection**

- Via 4-way plug provided (DIN43650)
- Max. conductor size is 15AWG
- 4-position orientation (90°/180°/270°/360°)

#### **Conductor size**

Maximum 0.06 in.<sup>2</sup> (1,5 mm<sup>2</sup>)

### **Cable gland**

■ PG9 provided. Cable diameter 0.16 to 0.35 in. (4 to 9 mm)

### Protection

- Polarity insensitive
- Over-current, short circuit, and load-missing protection
- Surge protection to IEC61326

# **Product Certifications**

#### L.V. Directive

EN61010-1 Pollution degree 2, Category II (264V max), Pollution degree 2, Category III (150 V maximum)

## Electro Magnetic Compatibility (EMC) Directive EN61326


#### **Overfill Protection**

If required, select Product Certificates code U1 for DIBt/WHG overfill protection. The approval number is Z-65.11-236.


### Grounding

 The Mini-SQUING should always be grounded either through the terminals or using the external ground connection provided

Direct Load Switching (Electronics Type Code 0)			
Operating Voltage	21 to 264 Vac (50 to 60 Hz)/dc		
Maximum switched load	500 mA		
Maximum peak load	5 A for 40 ms max.		
Minimum switched load	20 mA continuous		
Voltage drop	6.5 V @ 24 Vdc / 5 V @ 240 Vac		
Current draw (load off)	<3.0 mA continuous		

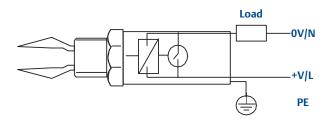


PNP Switching (Electronics Type Code 1)			
Operating Voltage	18 to 60 Vdc		
Maximum switched load	500 mA		
Maximum peak load	5 A for 40 ms max.		
Voltage drop	<3 V		
Supply Current	3 mA nominal		
Output current (load off)	<0.5 mA		



#### **Canadian Registration Number (CRN)**

The CRN is 0F04227.2C for model numbers with a NPT threaded process connection selected.

# **Dimensional Drawing**

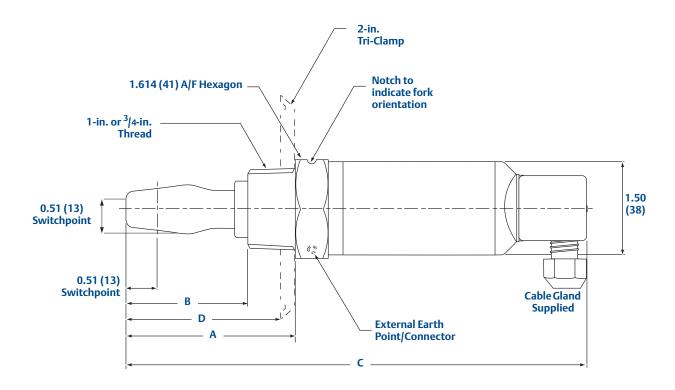

Process Connections	А	В	С	D
<sup>3</sup> /4-in. BSPT (R)	2.72 (69)	1.97 (50)	7.40 (188)	N/A
<sup>3</sup> /4-in. NPT	2.72 (69)	1.97 (50)	7.40 (188)	N/A
1-in. BSPT (R)	2.72 (69)	1.97 (50)	7.40 (188)	N/A
1-in. BSPP (G)	3.07 (78)	2.36 (60)	7.91 (201)	N/A
2-in. (51 mm) Tri-Clamp	2.72 (69)	1.97 (50)	7.40 (188)	2.52 (64)
1-in. Semi-extended	4.57 (116)	3.86 (98)	9.41 (239)	N/A

The Emerson logo is a trademark and service mark of Emerson Electric Co. Rosemount is a registered trademark of Rosemount Inc. Mobrey is a registered trademark of Rosemount Measurement Ltd. All other marks are the property of their respective owners. Standard Terms and Conditions of Sale can be found at www.rosemount.com\terms\_of\_sale

© 2015 Rosemount Measurement Limited. All rights reserved.

Emerson Process Management Rosemount Measurement Ltd. 158 Edinbugh Avenue, Slough, Berks., SL1 4UE, UK Tel +44 (0)1753 756600 Fax +44 (0)1753 823589 www.emersonprocess.com

Emerson Process Management Rosemount Inc. 8200 Market Boulevard Chanhassen MN 55317 USA Tel (USA) 1 800 999 9307 Tel (International) +1 952 906 8888 Fax +1 952 906 8889



